


Issue	
Rev.	

## 15. Maintenance Services and Trouble Shooting

### 15-1. Maintenance services

It may occur that the dishwasher does not function or does not function properly• before calling for assistance, let us see what can be done first: have you forgotten to press one of the buttons or to perform an essential operation?

### 15-2. Trouble shooting

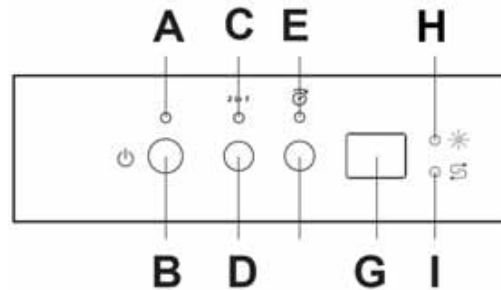

You can check the malfunction, when the time-remaining indicator “G” displays one of the signs as following.

Malfunction	Sign	Warning signal
Door switch trouble	E1	buzzer emits 10 short warning signals every 30 seconds
Sensor trouble	E2	buzzer emits 10 short warning signals every 30 seconds
Leak trouble	E3	buzzer emits 10 short warning signals every 30 seconds
Drain pump trouble	E4	buzzer emits 10 short warning signals every 30 seconds
Water supply trouble	E5	buzzer emits 10 short warning signals every 30 seconds
Water overflow trouble	E6	buzzer emits 10 short warning signals every 30 seconds